



17500 VRANJE, SERBIA  
1 Radnička St., Telephone: +381 17 421 121

## PELET STOVE FOR CENTRAL HEATING „DINO 27”



→ Pellet fuel from timber biomass biofuels →

### INSTRUCTIONS FOR CONNECTING, OPERATION, AND MAINTENANCE OF THE STOVE



*This product meets the requirements of the Ecodesign Directive in terms of efficiency and air pollution level, in order to contribute to the reduction of energy consumption and negative environmental impact.*

ENG\_v.1.2

1612511

# DINO 27 PELET STOVE FOR CENTRAL HEATING

*Heating devices (in this manual they are called "stoves") by Alfa Plam (in this manual titled Alfa Plam) are assembled and tested in accordance with the safety and applicable measures, and regulations of the European Community.*

*This manual is intended for users of the stoves, contractors who install the stoves, operators and workers for stove maintenance that is shown on the front page of the manual.*

*If you do not understand something in this manual, please contact our professional services or an authorized service center. In doing so, always specify the number of the chapter where there is some ambiguity.*

*Printing, translation and reproduction, even in part, of this manual is subject to licensing by Alfa Plam, which means that Alfa Plam must approve these actions. Technical information, figures, and specifications in this manual must not be given to a third party.*

## **WARNING:**

**IMPORTANT:** Connecting the appliance to the electrical installation must be carried out by qualified and authorized persons in accordance with applicable regulations.

**This appliance is not intended for use by persons (including children) with reduced physical, motor, and mental capabilities, or to persons with a limited knowledge and experience in the absence of the person responsible for their safety or care.**

**Children cannot be allowed to play with this appliance.**

## **DOUBLE COMBUSTION SYSTEM**

The flame obtained by proper combustion of the pellet in the stove emits the same amount of carbon dioxide (CO<sub>2</sub>), which would be freed as a result of the natural decay of wood.

The amount of carbon dioxide (CO<sub>2</sub>) obtained through combustion or decomposition of plant mass corresponds to the amount of carbon dioxide (CO<sub>2</sub>) which the plant mass is able to obtain from the environment and to transform it into air and carbon of the plants during its entire lifetime.

The use of non-renewable fossil fuels (coal, oil, gas), contrary to what happens with the wood, releases into the atmosphere huge amounts of carbon dioxide (CO<sub>2</sub>), that have been gathering up for millions of years, creating a greenhouse effect. The use of wood as fuel is therefore perfectly balanced with the environment, because the wood as a renewable fuel is in ecological harmony with nature.

Using the principle of clean combustion, we fully achieve these objectives, and so Alfa Plam has directed its development and all activities towards fulfilling this goal.

What do we consider clean combustion and how does it work?

Controlling and adjusting the primary air and injecting the secondary air causes secondary combustion, or the so-called post-combustion, which provides a secondary flame that is by its nature lighter and stronger than the primary flame. The addition of a new oxygen (inserted through the air) allows further combustion of gases that are not completely burned. This significantly increases the thermal efficiency and reduces harmful emissions of carbon monoxide (CO), because the incomplete combustion is minimized. These are the basic characteristics of these stoves and other products of Alfa Plam.

## 0.0. TECHNICAL CHARACTERISTICS OF THE STOVE

1. Dimensions of the stove:	
- width	574 mm
- depth	568 mm
- height	1237 mm
2. Flue terminal diameter	80 mm
3. Diameter of exterior air intake on the wall	100 mm
4. The height from the floor to the axis of the flue terminal	380 mm
5. Maximum stove power (radiation of water included)	26,9 kW
6. Radiation stove power at maximum power	2,4 kW
7. The power of a water heater at maximum power	24,5 kW
8. CO (at 13% O <sub>2</sub> ) emissions at maximum power	48 mg/m <sup>3</sup>
9. Flue gas mass flow at maximum power	14,6 g/s
10. The maximum consumption	5,847 kg/h
11. Degree of efficiency at maximum power	93,5 %
12. Minimum stove power (radiation of water included)	8,4 kW
13. Radiation stove power at minimum power	1 kW
14. The power of a water heater at minimum power	7,4 kW
15. The minimum consumption	1,78 kg/h
16. Degree of efficiency at minimal power	95 %
17. CO (at 13% O <sub>2</sub> ) emissions at minimum power	122 mg/m <sup>3</sup>
18. Flue gas mass flow at minimum power	7,2 g/s
19. Optimal draft	12 Pa
20. Heating volume	335 - 447 m <sup>3</sup>
21. The capacity of the funnel-like fuel reservoir	45 kg
22. The maximum working time with a full reservoir	25,3 h
23. The minimal working time with a full reservoir	7,7 h
24. Boiler water volume	32 l
25. Maximum output power	450 W
26. Voltage and frequency	230V / 50Hz
27. The weight of the stove:	
-net	193 kg
-gross	222 kg

## Contents:

1.	THE TASK PURPOSE OF THIS MANUAL.....	1
1.1.	UPDATING THE INSTRUCTIONS .....	1
2.	RESPONSIBILITIES OF THE MANUFACTURER .....	1
2.1.	GENERAL CHARACTERISTICS OF USERS.....	1
2.2.	TRANSPORTING AND USING THE STOVE - HANDLING.....	1
2.3.	RESPONSIBILITIES OF THE INSTALLER.....	1
3.	INSTALLATION – STOVE INSTALLATION .....	2
3.1.	INSTALLING THE STOVE .....	2
3.2.	THE SMOKE EXHAUST SYSTEM .....	2
3.3.	INSULATION AND THE DIAMETER OF THE OPENING (HOLE) ON THE ROOF (OR IN THE WALL) .....	4
3.4.	COMBUSTION AIR SUPPLY (Figure 8) .....	6
3.5.	CONNECTING THE POWER .....	6
4.	IMPORTANT INSTRUCTIONS.....	7
5.	WARNING SAFETY MEASURES FOR STAFF MAINTENANCE .....	7
5.1.	WARNING SAFETY MEASURES FOR THE USER.....	7
6.	SAFETY GUIDILINES FOR IGNITION AND CLEANING OF THE STOVE.....	8
6.1.	ROUTINE CLEANING AND MAINTENANCE DONE BY THE USER OF THE STOVE .....	8
6.2.	CLEANING AND MAINTENANCE (for employees who do maintenance) .....	10
6.3.	SPECIAL MAINTENANCE .....	10
7.	IMPORTANT SAFETY INFORMATION .....	10
8.	THE PELLET QUALITY IS VERY IMPORTANT .....	11
8.1.	STORING THE PELLET .....	11
9.	CONNECTING THE HYDRAULIC INSTALLATIONS .....	11
10.	PRESSURE AND RETURN PIPE .....	12
11.	BUILT-IN COMPONENT OF THE STOVE.....	12
11.1.	SAFETY VALVE .....	12
11.2.	CIRCULATION PUMP .....	12
11.3.	AUTOMATIC AIR VALVE.....	13
11.4.	EXPANSION VESSEL.....	13
11.5.	CHARGING AND DISCHARGING TAP .....	13
12.	INSTALLING AND IGNITING.....	13
13.	PRACTICAL INSTRUCTIONS AND TIPS FOR THE USE OF THE HEATING SYSTEM .....	13
14.	PELLET LOADING .....	13
15.	CONTROL SYSTEM OF THE STOVE.....	14
15.1.	ELECTRIC CONNECTIONS SCHEME .....	14
15.2.	CONTROL PANEL (DISPLAY) - BUTTONS AND FUNCTIONS.....	14
15.3.	MENU.....	16
15.4.	STOVE IGNITION AND FUNCTIONAL CONDITIONS.....	21
15.5.	POSSIBLE PROBLEMS AND SOLUTIONS .....	22
16.	SAFETY MEASUREMENTS The stove is equipped with the following safety devices: .....	24
17.	FAULTS - CAUSES – SOLUTIONS.....	24
18.	INFORMATION ON DISPOSAL (THROWING AWAY) AND DISMANTLING (PULLING APART) THE STOVE	25

# 1. THE TASK PURPOSE OF THIS MANUAL

The purpose of the instructions is to enable the user to take all the necessary measures in order to ensure safe and proper use of the stove.

## 1.1. UPDATING THE INSTRUCTIONS

This manual reflects a work of art at the moment when the stove was placed on the market. Therefore, Alfa Plam does not take into account the stoves that are already on the market with the appropriate technical documentation and considers them as defective or inadequate after any kind of modification, adaptation or application of new technologies to newly produced machines.

The contents of this manual should be carefully read and studied. It is necessary to strictly follow all the instructions given in this manual. All information contained in this manual is necessary for proper connection, use, and maintenance of your stove.

Therefore, this manual has to be carefully stored for the necessary instructions in the event of any problems or concerns.

If the stove is given or sold to another person, the new owner must also be given this instructions manual.

If you have lost your manual, the manufacturer can provide you with a new one.

# 2. RESPONSIBILITIES OF THE MANUFACTURER

In issuing these instructions, Alfa Plam **accepts no civil or legal liability, direct or indirect, due to:**

- **Accidents caused by not respecting the standards and specifications given in this manual,**
- **Accidents caused by improper handling or use of the stove by the user,**
- **Accidents resulting from modifications and repairs, which were not approved by Alfa Plam,**
- **Poor maintenance,**
- **Unforeseen events,**
- **Accidents resulting from the use of spare parts that were not original or not intended for these models of stoves.**

**Responsibility for connecting is fully assumed by the installer - contractor.**

## 2.1. GENERAL CHARACTERISTICS OF USERS

The user of the appliance must have the following basic characteristics:

- be an adult and responsible person,
- have a specific technical knowledge that is needed for routine maintenance of electrical and mechanical components of the stove.

CHILDREN ARE NOT ALLOWED NEAR THE STOVE OR TO PLAY WITH IT WHILE IT IS ON.

## 2.2. TRANSPORTING AND USING THE STOVE - HANDLING

When using the stove, it is necessary to be careful and not allow the stove to tilt forward. This is because the brunt of the stove is forward.

During transportation of the stove, which has to be completely safe, make sure that the forklift has the load that is greater than the weight of the stove that it is supposed to lift. Avoid twitching and jerking movements.

ALL PACKAGING SHOULD BE REMOVED SO THAT IT IS OUT OF REACH OF CHILDREN, BECAUSE THE MATERIALS THAT ARE INSIDE CAN LEAD TO CHILDREN SUFFOCATING. THESE INCLUDE PLASTIC BAGS, FILM, POLYSTYRENE, ETC.

## 2.3. RESPONSIBILITIES OF THE INSTALLER

**Installer's responsibility** is to do all the tests of the flue pipeline, air supply, and all the things that are necessary for connecting (installing) your stove.

**Installer's responsibility** is to adjust the stove to local regulations which apply where the stove is connected (installed).

**The use of the stove** must be in accordance with the instructions for use and maintenance, as well as with all the security standards that are given by the local regulations that apply where the stove is connected (installed).

The installer has to **check:**

- the type of stove to be connected,
- whether the room corresponds to the stove where the stove will be installed, which is expressed as the minimum size required for installation, set forth by the manufacturer of the stove,
- heat generator
- manufacturer's instructions regarding the requirements of smoke removal systems (ducts and pipes for smoke exhaust),
- inner cross section of the chimney, the material out of which the chimney is made, uniform cross section,
- that there are no disturbances and obstacles in the chimney,
- height and vertical extension of the chimney,
- altitude at the place of connecting the stove,
- the existence and suitability of the protective cover for the chimney that is resistant to the wind,
- the possibility of securing the external air supply and the size of the necessary openings,
- simultaneous use of stove that needs to be connected with other equipment that already exists at that place.

If the results of all checks are positive, then we can proceed with connecting the stove. Make sure you follow the instructions of the manufacturer of the stove, as well as the standards for fire protection and the safety standards provided.

When you are finished connecting, the stove has to be turned on in trial mode for at least 30 minutes to test if the stove is working properly.

When the installation and important details are completed, the installer must provide the client the following:

- Instructions for use and maintenance issued by the manufacturer of the stove (if such instructions are not provided with the stove),
- The documentation necessary to comply with the existing standards.

### 3. INSTALLATION – STOVE INSTALLATION

#### **Responsibility for the work carried out at the place of connection is entirely on the user.**

Before one turns the stove on, the installer must meet all legal standards of safety, as well as the following requirements:

- to check that setting up the stove complies with local, national, and European regulations,
- that the location of setting up the stove meets the requirements set forth in this manual,
- to set up the flue pipes,
- that air intake matches the type of the installed stove,
- that the electrical connections are not set up using temporary and/or not insulated electrical cables,
- to evaluate the effectiveness of grounding electrical systems,
- to always use personal protective equipment and all means of protection that are prescribed by local regulations,
- to always provide sufficient service space required for any maintenance and repair of stoves

#### 3.1. INSTALLING THE STOVE

We recommend you to unpack the stove only when the stove is set up in the position where it will be connected.

The stove is on the plastic pins that have M10 bolts (4 items), that are threaded into the stove base. At the screws there are M10mm threaded nuts to the plastic parts. The legs are wound up all the way to the base of the stove. After unpacking the stove, when you put it in a place where it will be located, it is necessary to unscrew all the legs, so that a total height from the floor to the base of the stove is about 25mm. When you are done with nivelation of the stove that needs to stand horizontally, tighten the nuts with a 17 wrench, which needs to approach the base of the furnace, and at the same time hand-holding the plastic part of the legs, tighten the nut. The height of about 25mm from the floor to the base is needed for better circulation of air and cooling the stove. In this way you protect the stove from overheating and you extend its life.

If the surrounding walls and/or floors are made of materials that are **not resistant to heat**, then one should use adequate protection using the insulating material that does not burn.

**In order to protect the building construction against the risk of fire, flammable elements (such as walls, doors, furniture, home appliances...) must be kept on the safe distance from the stove:** 100 mm from the rear side, 200 mm from the lateral sides and 800 mm from the front side. Always leave at least 100 mm between the rear side of the stove and the wall to allow for proper air circulation, or for the air to flow properly in that area. To protect the floor if it is made of combustible materials (wood, parquet, linoleum, laminates, carpets...), we suggest you put a metal plate under the stove on the floor with the thickness of 3-4 mm that will stretch 300 mm in front of the stove. Any elements made from wood (e.g. beams) or other combustible material located near the stove should be protected/covered with fireproof material.

Leave enough clearance for maintenance work.

If the stove is installed in a kitchen with a trellis for drawing out air or if it is placed in the room with appliances that use solid fuel (such as a wood burning stove), always make sure that the amount of inlet air in the room is sufficient to ensure safe operation of the stove.

If a smoke channel goes through the ceiling, it should be properly thermally insulated using the protection out of insulating materials that does not burn. When the stove is set up into place, it should be levelled using pins.

#### **DANGER !**

The exhaust gas Armour **must not be** connected to:

- the smoke pipe used by another heat generator (boilers, furnaces, fireplaces, stoves, etc.),
- the air drawing system (grilles, ventilation openings, etc), even if the system is inserted into the drain pipe.

#### **DANGER !**

It is forbidden to install shut-off valves for the flow (draft) of air (flap valves that can prevent airflow or disable drafts).

#### **ATTENTION**

If the ejection path of smoke creates such a bad draft, of a bad flow of air (many curves, improper completion of the ejection of smoke, constriction, etc.) discharge of smoke can be bad, or in a situation like this smoke discharging is not as good as it could be.

The smoke ejection system from the stove operates under negative pressure in the stove chamber and with mild pressure from the smoke drain pipe. It is very important that the smoke extraction system is hermetically closed (sealed). This requires the use of a smooth tube on the inside. First of all you must carefully study the plan and structure of the room when the smoke extraction pipe is set up through the walls and roof, so that the installation of pipes is performed properly in accordance with the standards of fire protection.

You should first ensure that the room where the stove is located has enough air for combustion. It is advisable to periodically performs check so as to ensure that the combustion air comes right up to the combustion chamber. The stove operates at 230 V ~ 50 Hz. Make sure that the electrical cord is not underneath the furnace, to be away from the stove, to be away from hot spots, and not to touch any sharp edges that it could interdict. If the stove is electrically overloaded, this can lead to shortening of the lifetime of the electronics of the stove.

**Never turn off the power supply by pulling the plug when there is a burning flame in the stove. This could jeopardize the proper functioning of the stove.**

#### 3.2. THE SMOKE EXHAUST SYSTEM

The smoke exhaust must be carried out in accordance with existing standards. Exhaust gas tube should be well sealed (see Figures 1-7).

For smoke exhaustion, one can also use classic brick chimneys while flues can also be made of pipes that need to be well insulated (double wall) and sealed, to avoid creating condensation in them.

The drain tube absolutely must not be connected to other systems of any kind, such as the systems where the smoke is removed from the combustion chamber, exhaust grilles or air distribution system, etc. Also, the smoke exhaust must not be

set up in enclosed or semi-enclosed areas such as garages, narrow corridors, underground passages, or at any other places where there is smoke. When the stove is connected to the exhaust gas pipeline, it is necessary to bring professional chimneysweep to verify that the chimney does not even have the tiniest cracks or fissures. If in the exhaust gas chimney there are such cracks, the pipe for smoke exhaustion must be wrapped in insulation for proper functioning.

For this purpose, the tubes that can be used are solid and made of painted steel (minimum thickness 1.5 mm) or from stainless steel (minimum thickness 0.5 mm).

The smoke extraction system (chimney) out of metal pipes must have a grounding in accordance with existing standards and regulations. **Grounding is required by law.**

**The grounding connection must be separated from the grounding for the stove.**

The smoke exhaustion pipe must be done according to the standards in terms of dimensions and materials used for its construction (Figure 1).

- A) The top of the chimney is resistant to wind
- B) Maximum cross section is 15 x 15 cm or a 15-cm diameter, with the maximum height of 4-5 m.
- C) Gasket
- D) Inspection hole - for control

Flue pipes that are in poor shape, or are made out of inappropriate materials (asbestos cement, galvanized sheet, etc. with rough or porous surfaces) are inadequate and jeopardize the proper functioning of the stove.

The smoke can be drained through a classic smoke pipe (see next Figure), provided that it meets the following requirements:

- Check the maintenance of the drain flue pipes or chimneys. If the smoke drain pipe is old it should be replaced with a new one. If the chimney is damaged it is good to repair it or rebuild it by inserting a steel pipe that is properly insulated with mineral wool.

- The smoke can be discharged directly into the smoke pipe (chimney) only if it has a cross-section of up to 15 x 15 cm, or a diameter of up to 15 cm, and if there is a cover for checking and cleaning.

- **If the chimney has a larger cross section** than 15x15cm, or a diameter greater than 15cm, a possible increased regulation of draft (its decrease) in the chimney can be made in three ways:

1. If in the bottom of the chimney there is an opening for cleaning it should be partially open.
2. Insert a steel pipe in the chimney with a diameter of 10cm, if there is a possibility for such reparation of the chimney.
3. By adjusting certain parameters in the stove. This adjustment must be done only by an authorized service of Alfa Plam.

- Make sure that the connection to home chimney is properly sealed.
- Avoid contact with material that burns easily (such as wooden beams), and in all cases they should be isolated with anti-fire material (see Figure 2).

- A) Mineral wool
- B) Steel pipes
- C) A baffle plate.

The stove is designed to be connected to the chimney flue pipes with a diameter of 80mm. If you are not using a standard chimney, but you have a new chimney, or you are modifying the existing one, use insulated stainless pipes (double wall) with a diameter given in Table 1. Flexible pipes are not permitted.

SYSTEM TYPE	DIAMETER mm	SYSTEM MARK
Pipe length less than 5 m	80	acceptable
Pipe length more than 5 m	100	required
To be installed in places above 1,200 meters above sea level	100	recommended

Table 1

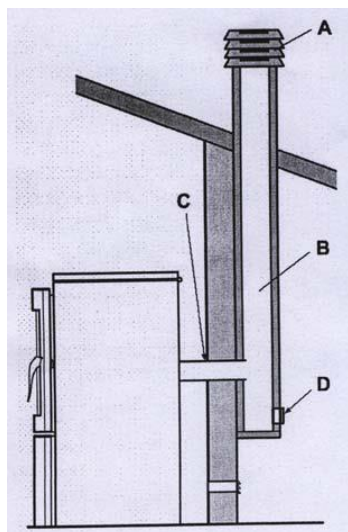


Figure 1

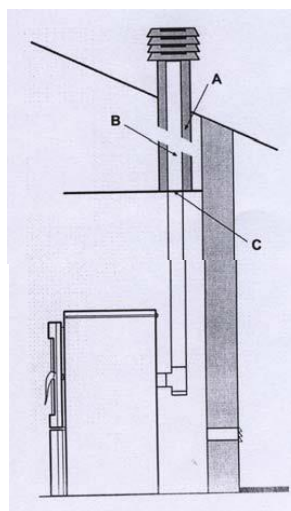


Figure 2

When using the connecting pipe between the stove and the flue drain pin, be sure to use a "T" connector (as shown in Figures 5 and 6), with the clean-out cover (cap) next to the stove. Applying the "T" connector must enable the collection of ash, which is produced inside the tube, and the smoke drain pipe must occasionally be cleaned without having to remove the tube. The smoke is under mild pressure and therefore it is required to check the cover (cap) for cleaning the exhaust gas system that is perfectly sealed and it remains so after each cleaning. Make sure to perform the same sequence for assembly and check the condition of the seals.

Install the flue pipes pursuant to Figure 7.

It is strictly recommended to avoid the use of horizontal extensions, and if necessary, make sure that the pipe is not bent but that it has the slope of at least 5%. The horizontal part of the drain flue pipes must not in any case exceed the length of 3 m.

It is not recommended to connect the smoke exhaust directly to the stove with a horizontal part longer than 1 m. See Figures 4,5,6 and 8. After the T branch it is necessary to set up a vertical extension of Ø 80mm in length for at least 1-1.5 m, and only after that to move to the horizontal extension of Ø 80mm and a vertical extension of Ø 80 or Ø 100mm, depending on the height of the flue pipe (chimney) as shown in Table 1.

When connecting the stove to the chimney using fittings, one must install a knee with a hole for cleaning (Figure 2a). Using the knee with an opening for cleaning allows for regular cleaning, without the need to dismantle the pipes. Drain gases in the chimney connector are under mild pressure so it is necessary to check that the cover for cleaning the ashes is completely sealed and to seal it after each cleaning. Please make sure everything is properly returned to its place, and check the condition of the seals.



Figure 2a: Cleaning elements

Ideal vacuum primarily depends on the absence of barriers such as narrowing and/or corner connectors. It is recommended that the knees are 30°, 45°, and 90°. Knee at 90° shall be three-fold (Figure 2b).

In any case, it is necessary to ensure that the initial part of the vertical flue pipe has the length of at least 1.5 m. Only in this way can you achieve the proper removal of flue gases.

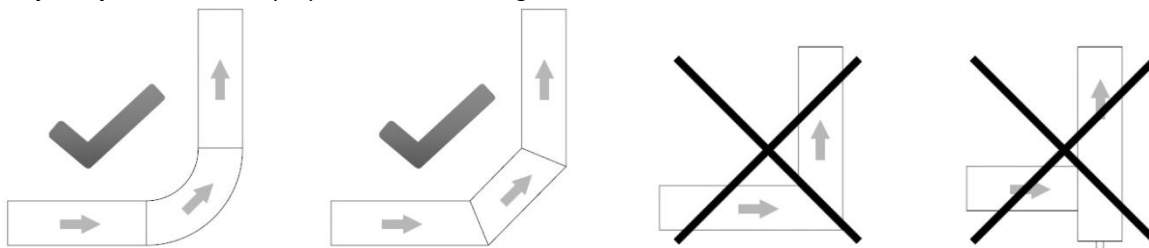


Figure 2b:

In Figure 3, left, we show how a complete (top) is supposed to look like when you have two chimneys next to each other, and in Figure 3, right, how not to do the end part.

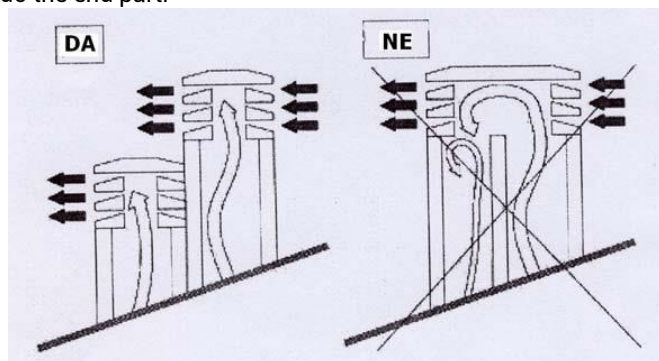


Figure 3

### 3.3. INSULATION AND THE DIAMETER OF THE OPENING (HOLE) ON THE ROOF (OR IN THE WALL)

Once you determine the position of the stove, it is necessary to make a hole through which a smoke pipe must pass. This varies depending on the type of installation, diameter of the exhaust gas pipe (see Table 1) and the type of wall or roof for the tube to pass. See Table 2. Insulation needs to be made out of mineral wool with a nominal density greater than 80 kg/m<sup>2</sup>.



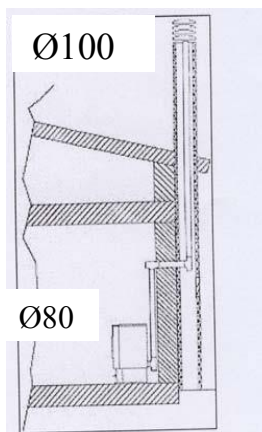


Figure 4

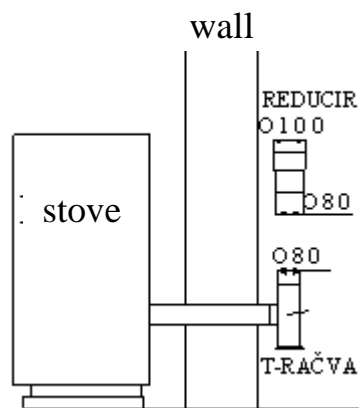


Figure 5

1. Armature 80> 100
2. A hose fitting with a T shape

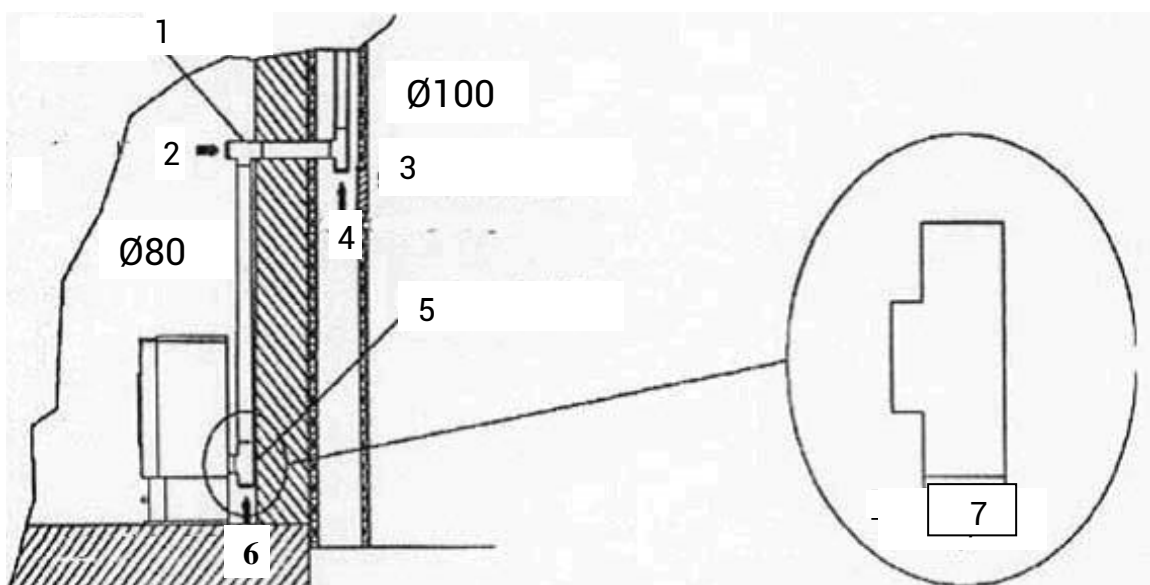


Figure 6

1. A hose fitting with a T shape - a T connector pipeline
2. Cleaning direction
3. Opening, a window for servicing/inspection
4. Cleaning direction
5. A hose fitting with a T shape - a T connector pipeline
6. Cleaning direction
7. A pressure lid for cleaning (plug-in)

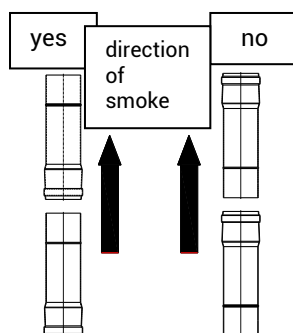


Figure 7: Mounting the flue pipe

Insulation thickness mm		Diameter of the smoke exhaust pipe (mm)	
		D.80	D.100
		Diameters of the holes (holes) to be made (mm)	
The walls are made of wood, or in any case, flammable, or parts that are flammable.	100	150	170
Concrete wall or a roof	50	100	120
A wall or a brick roof	30	100	120

Table 2: Insulation thickness for the part of the system that passes through the wall or roof

Above all it is necessary to provide the PERFECT AIRFLOW (draft) in pipes for smoke exhaustion that has to be free, without any obstacles, such as different narrowing or corners. All displacements of the axis must have a tilted orbit with a maximum angle of 45 degrees from the vertical, while 30 degrees is the best solution. This displacement would be best done near the top of the chimney resistant to the wind.

According to the regulations (the top of the chimney resistant to wind, distance, and placement of the stove) the distances shown in Table 3 must be met:

Roof slope:	The distance between the ridge and the chimney cap	Minimum height of the chimney measured at the top slot (at the back of the chimney)
$\alpha$	Distance in meters	Height in meters
15°	less than 1.85 m greater than 1.85 m	0,50 m above the ridge 1,00 m from the slope of the roof
30°	less than 1.50 m less than 1.50 m	0,50 m above the ridge 1,30 m from the slope of the roof
45°	less than 1.30 m greater than 1.30 m	0,50 m above the ridge 2,00 m from the slope of the roof
60°	less than 1.20 m greater than 1.20 m	0,50 m above the ridge 2,60 m from the slope of the roof

Table 3

**However, it is required to provide an initial vertical extension of 1,5 m (minimum) in order to provide proper discharge of smoke.**

### 3.4. COMBUSTION AIR SUPPLY (Figure 8)

The air required for combustion, which is taken from the environment, must be supplied by a single ventilation grill mounted on the outer wall of the room. This will ensure better combustion and thus lower consumption of pellets. It is not recommended to have outside air drawn directly from the tube, as it will reduce the efficiency of combustion. A ventilation shaft must always be equipped with one ventilation grille on the outer side as protection from rain, wind, and insects.

This hole must be made on the outer wall of the room where the stove is located.

**The supply of combustion air from the garage, a warehouse for combustible materials, or from a room where there are risks of fire is prohibited.**

**The opening of the outer supply of combustion air must not be connected by pipes.**

**If the room has some other devices for heating, the supply of combustion air must ensure the amount of air that is required for proper operation of the device.**

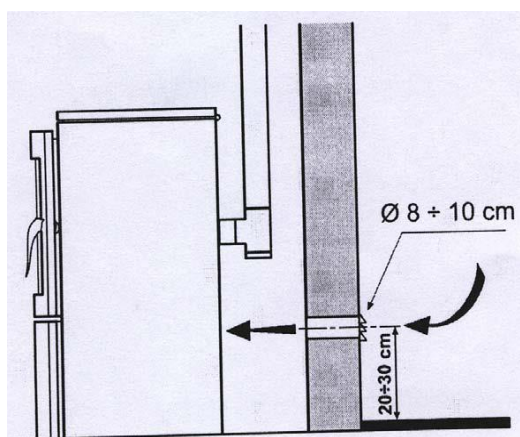


Figure 8: Minimum gaps for setting up ventilation grilles.

For proper and safe placement of ventilation grilles see data given in Table 4. These are the minimum distances from each airspace or smoke extraction. This value can change the configuration of the air pressure. It should correspond to the ordering to secure that the open window draws outside air, depriving the stove of it.

Ventilation grid must be set up at least		
1 m	under	doors, windows, gas exhausts, air chambers, etc.
1 m	horizontally from	
0.3 m	above	
2 m	from	the smoke exhaust

Table 4: The minimum distance for the supply of combustion air

### 3.5. CONNECTING THE POWER

These stoves are connected to electricity. Our stoves have electrical cables that are suitable for medium temperature. If you need to replace the power cord (if it is damaged, for example) then consult with our authorized technical staff. Before you plug in the electric stove note the following:

- That the characteristics of electrical systems correspond to the information that is specified in the data on the identification plate on the stove.
- If the smoke extraction system is metal, it must have a grounding terminal in accordance with the existing standards and legislation. **Grounding is the law.**
- The electrical cable must not at any time reach a temperature that is 80°C above the ambient temperature. When the stove is installed and placed in its spot, a bipolar switch or socket must be easily accessible.
- If the stove is not used for a long time, unplug it or switch to the switch off (0) position.

In the event of failure or malfunction, turn off the stove right away or switch to a switch off (0) position and contact an authorized service center.

## 4. IMPORTANT INSTRUCTIONS

THE FOLLOWING INSTRUCTIONS ARE REQUIRED FOR THE SAFETY OF PEOPLE, ANIMALS, AND PROPERTY.

We wish to inform the installer of the stove on some of the general guidelines which must be followed for proper installation and for proper stove mounting. These standards are required, but not completely. For further and more detailed information one needs to read the rest of this instructions manual.

- Plug the stove into an outlet that is grounded. Figure 9
- The switch on the rear of the stove is set to position 1. Figure 10
- Do not allow children or pets to be near the stove.
- Use pellets only, not other fuel.
- Notify all users about the potential risks and dangers and teach them how to handle the appliance.
- If the stove is placed on a wooden floor, then it is recommended to isolate the pedestal on which it stands.

The stove operates with a combustion chamber, which is in the negative pressure. **Therefore, make sure that the smoke is well thermally insulated.**

**When the stove is turned on for the first time then, due to the stabilization process a small amount of paint (not harmful to health) that covers the stove vaporizes. It is therefore necessary to air the room so that it is cleared from the fumes.**

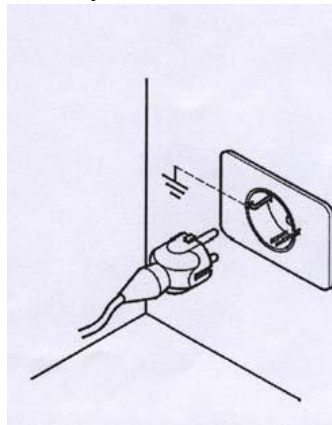


Figure 9



Figure 10

## 5. WARNING SAFETY MEASURES FOR STAFF MAINTENANCE

The contractors who work in maintenance, in addition to following all safety measures, must:

- Always use safety equipment and personal protective equipment,
- Turn off the power supply before they start working,
- Always use the appropriate tools,
- Before they begin any work on the stove they need to keep in mind that it should be cold and that the ashes should be cold as well. They need to make sure the handles are cold as well.
- **NEVER TURN THE STOVE ON** if there is just one of the safety devices that is defective, improperly set up or it does not work at all.

- Do not make modifications of any kind, for any reason, other than those permitted and explained by the manufacturer himself.

- Always use original spare parts. Never wait until the components wear out before you replace them.

Replacing the worn parts, or the components of the stove before they stop working contributes to the prevention of damage caused by accidents due to sudden failure, or breaking of the components, which can lead to serious consequences for people and/or property located around the stove.

- Clean the firebox before lighting the stove.
- Make sure there is no condensation. If condensation occurs it shows that there is water from the cooling smoke.

We recommend you find the possible causes to be able to establish a regular and correct operation of the stove.

### 5.1. WARNING SAFETY MEASURES FOR THE USER

The place where the stove is to be set up, called the mounting place, must be prepared by local, national, and European regulations.

The stove is a "heating machine" and while it is on it has outer surfaces that are very hot or that achieve very high temperatures.

This stove is designed to burn fuel from pressed wood mass (a pellet with a diameter of 6 mm to 7 mm, with the length of 30 mm, with maximum moisture 8-9%).

**It is therefore very important to pay attention to the following when the stove is on:**

- Do not approach and touch the glass on the door, there is a BURNING HAZARD
- Do not approach and touch the smoke drain pipe, there is a BURNING HAZARD
- Do not do any cleanups
- Do not open the door because the stove is working properly only when it is sealed
- Do not throw away the ashes when the stove is ON
- Children and pets need to stand away from the stove
- FOLLOW ALL INSTRUCTIONS GIVEN IN THIS MANUAL

**Likewise, the proper use of biofuel pellets means:**

- Only use the fuel that meets the manufacturer's instructions,
- Always follow the maintenance plan for the stove,
- Clean the stove every day (only when the stove and the ash are cold),
- Do not use the stove in case of any defects or abnormalities, in the case of unusual noise and/or suspected faults,
- **Do not spray water on the stove, even when firefighting,**
- **Do not turn off the stove by pulling the plug. Use the button on the board to turn off,**
- Do not tilt the stove, IT MAY BECOME UNSTABLE,
- Do not use the stove as a support or a holder. Never leave the tank lid open.
- Do not touch the dyed parts of the stove while it is ON,
- Do not use wood or coal as a fuel, **but only the pellet** with the following characteristics: diameter of 6-7 mm, maximum length 30 mm, maximum moisture content 8-9%,
- Do not use the stove to burn waste,
- Always perform all operations with maximum security measures.

## **6. SAFETY GUIDILINES FOR IGNITION AND CLEANING OF THE STOVE**

- For turning the stove ON never use gasoline, kerosene or any other flammable liquid. Keep these types of fluid away from the stove while it is running,
- Never turn the stove ON if the glass is damaged. Do not strike the glass or the door so that they do not get damaged,
- While the stove is ON, do not open the door to clean the glass. Clean the glass only when the stove is cold, using a cotton cloth or paper towel and a glass cleaner,
- Make sure the stove is secure to prevent any movement,
- Make sure that the ash box is inserted and that it is fully closed, so that the doors are leaning properly on the box,
- Make sure the stove door is firmly closed while the stove is ON,
- Use a vacuum cleaner to pull the ashes from the stove only when the stove is completely cool,
- Never use abrasive cleaners for cleaning the surface of the stove.

### **6.1. ROUTINE CLEANING AND MAINTENANCE DONE BY THE USER OF THE STOVE**

Use a drum shaped vacuum cleaner that can facilitate cleaning the stove. The vacuum cleaner must have a filter that will prevent the sucked dust to go back into the room where the stove is located.

Before you get started with routine maintenance, including cleaning, take the following precautions:

- Turn off the stove from the power supply before you start doing anything,
- Before you start doing anything make sure the stove and the ash are cool,
- Use the vacuum cleaner to vacuum up the ash from the combustion chamber **every day**,
- Using the vacuum cleaner carefully clean the firebox **every day** (after each use and when the stove is cool)
- **Always make sure the stove and the ashes are cool.**

- FIREBOX (box-shaped) - it burns the pellets made out of wood mass. See Figure 11. It is recommended that the firebox be vacuum cleaned after each use, **every day** (when the stove is cool). Every day, it is recommended to take out the firebox and to make sure that there is no residual ash at the bottom of it, as well as unburned pellets that were collected at the bottom of the firebox. Then put the firebox back and set it firmly into place to ensure the safe running of the stove. The firebox must sit straight - horizontal, it must not be tilted! The sealing tape from the underside of the firebox must be in its place, and must not be damaged.

If you are not sure, do not hesitate to call an authorized service center for explanation and additional information, since the manufacturer does not know what the situation is with the connection and maintenance of the stove and gives no warranty for the connection of the stove and its maintenance.

**The manufacturer does not assume any responsibility for damage caused by third parties.**

1. For the best operation of the stove, all holes must be free of ash



Figure 11



The ash container should be vacuumed or emptied if it is full.

**Make sure the stove and the ash are cool.**

Upper ash container must be cleaned every or every other day, by vacuuming or by simply throwing the ashes away. This will get rid of any impurities that remain inside when the pellets are burning. The container then has to be returned to its proper place. Never put a pellet that has not burned in the ash container.

Lower ash container must be cleaned once every seven or 10 days, by vacuuming or by simply throwing the ashes away. Before that, loosen the two butterfly nuts. This will get rid of any impurities that remain inside when the pellets are burning.

At the same time, use a vacuum cleaner to suck up the ash in the smoke chamber through an opening in the front of the boiler bottom ash tray.

The container then has to be returned to its proper place.

- SMOKE PIPES IN THE BOILER

They need to be cleaned manually with a special key for every 40-50 kg of spent pellets (one full tank of pellet). First use the key to lift up small round lids with openings, two of them, that are located on the cover of the stove at the top. Using the same key go into the openings of the lever - the pins which are connected to the cleaning levers, and dust them a few times by lifting them up and putting them down, as shown in Figure 12.



Figure 12



Figure 13

- UPPER SMOKE CHAMBER

Should be manually cleaned for every 90-100 kg of spent pellets (two full tanks). Lift the tank lid for the pellet. In the tank, in the upper front part, under the lid, there is a button for the chamber cleaning mechanism. By pulling the mechanism button a few times back and forth you will clean the chamber. Do not worry if the mechanism moves slowly, if it scratches, or gets caught. This is how it cleans the chamber.

Clean the stove only when it is cold. At the end of the cleaning, push the button all the way back (pull it) so that you can see the button and the bar of the cleaning mechanism. See Figure 13.

-OPENING AND CLOSING OF THE DOOR OF THE FURNACE AND ASH PAN LID

Always keep the furnace door closed tight while the furnace is working.

Furnace doors with glass should be opened when the furnace is off or is cold.

Place the prong of the opening and closing handle (with plastic protection) which is delivered with the furnace, into the prong of the handrail placed on the furnace door. The furnace door is opened by lifting the handrail and pulling forward.

In the process of closing of the furnace door, the handrail for opening and closing has to be lifted, into the position it had been in before the door is opened. In this way, the handrail prong does not bump into the vertical molding. In the process of closing the furnace door, do not keep the handrail lowered because the prong of the handrail will nick the molding, potentially damaging it.

The correct handrail position during furnace door closing is shown in image 13a, and the incorrect position is shown in image 13b.

Image 13c shows the opening and closing of the ash pan lid. When the prong of the handrail for opening and closing is placed into the opening of the ash pan handrail prong which is connected to the ash pan lid, it is not necessary to turn the handrails upward-downward, but to pull forward-backward, so that the lid would open or close.



Image 13a – correct position



Image 13b – incorrect position

-GLASS DOOR (check and clean periodically):

**Make sure the stove and the ash are cool.** Clean the glass with a soft cloth. Glass is made from pyroceramics resistant to high temperatures. In case of damage, before re-using the stove, replace the glass. The glass must be replaced only by the authorized persons.

Smoke exhaust fan area should be checked and cleaned every six months.

**Make sure the stove and the ash are cool.**

Cleaning the interior flue exhaust is done by first removing the cover on the bottom of the box for the ashes and inserting the vacuum cleaner hose through that hole, as to vacuum out the remaining ashes, Figure 14.

Lower flue  
exhaust (lower  
ash box)



Figure 14

- GENERAL CLEANING AT THE END OF THE HEATING SEASON

**Make sure the stove and the ash are cool - unplug the stove from the power supply.**

At the end of the heating season, to be safe, unplug the stove from the power supply. It is important to clean and check the stove, as explained in the above points.

**Make sure the stove and the ash are cool.**

After prolonged use, it is possible that the asbestos tape for sealing the door separates. This sealing tape sticks to the door with silicone resistant to high temperatures. To resolve this, tape the back of it using an adhesive that is resistant to high temperatures. This is very important for good sealing of the doors.

## 6.2. CLEANING AND MAINTENANCE (for employees who do maintenance)

FLUES - CHIMNEY should be cleaned every six months or after burning two tons of pellets.

**Make sure the stove and the ash are cool.**

The smoke channel (chimney) is resistant to wind and has to be checked and cleaned every year, best at the beginning of the heating season. It is best to pay the authorized professional contractors for their cleaning. The places that need special attention when cleaning are shown in Figure 15.

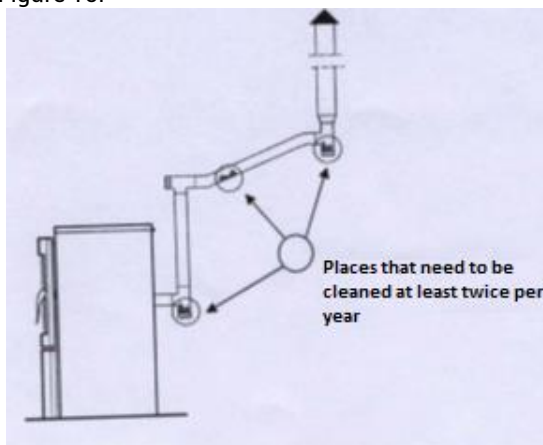


Figure 15: Places that need to be cleaned at least twice a year

## 6.3. SPECIAL MAINTENANCE

Your stove is a heat generator that uses pellets as solid biofuel. This is why you should do special maintenance once a year.

This is best done at the beginning of the heating season.

The purpose of the special maintenance is to ensure proper and efficient operation of the stove.

## 7. IMPORTANT SAFETY INFORMATION

**You have purchased a product of the highest quality.**

The manufacturer is always at your service to provide you with all the information you may need regarding the stove and instructions for assembly and installation in your geographical conditions. Properly connecting the stove, according to these instructions, is very important to prevent the danger of fire and any defects.

**The stove works** with a combustion suction pressure. **Therefore, make sure that the smoke is well thermally insulated.**

**DANGER!**

**In case of fire in the smoke exhaust pipe** take all the people and pets out of the room, unplug the power supply using the power switch in the house or remove the plug from the wall (plug must always be easily accessible and free of obstacles), and immediately call the fire department.

### **DANGER !**

You cannot use conventional firewood.

**DANGER! : The regular firewood cannot be used.**

**DANGER! : Do not use the stove to burn waste.**

**DANGER! : Do not place the pellets manually in the burner.**

**DANGER! : In order to avoid water freezing, turn on the stove when the outside temperature drops below 0°C. There is a safety anti-freeze function installed in the stove that activates the pump whenever the temperature of the boiler falls below 5°C.**

**DANGER! : Many of the surfaces of the product may become very hot (door, handle, glass, smoke extraction pipes, etc.). Be careful, especially with children. Avoid coming into contact with these parts without adequate protective clothing with thermal protection. During working phase, do not put the bag of pellets to into contact with the product while filling the pellet hopper.**

## **8. THE PELLET QUALITY IS VERY IMPORTANT**

**The pellet quality is very important!** The stove is designed to use pellets. Since various types and dimensions of pellets appear on the market, it is important to choose pellets that do not contain impurities, and which are compact and do not produce dust (uses pellet which meets the European standard, minimum EN plus A2). Consult your supplier about the type of pellet, whose size must be 3,15-40 mm and cross section is 6 mm. **The proper functioning of the stove depends on the type and quality of the pellet.**

Under no circumstances shall the manufacturer be responsible for the poor operation of the stove due to the use of poor quality pellets.

### **⚠ Attention**

If sawdust or small – decomposed pellets are put into the funnel-shaped part of the stove i.e. the fuel tank, these may block the pellet feeding. Such pellets may obstruct the operation of the gear motor driving the pellet feeding mechanism, or they may damage the gear motor. If you see any such small, decomposed pellets at the bottom of the pellet tank or at the bottom of the screw conveyor when the tank is empty, vacuum them with the vacuum cleaner by inserting the vacuum cleaner hose through the openings of the pellet grate. Or even better, every one or one and a half months vacuum clean the tank bottom in the above described way when the tank has a little quantity of pellet.

### **8.1. STORING THE PELLET**

Pellets must be stored in a dry place which is not too cold. Cold and wet pellets (with a temperature of around 5 °C) decrease the thermal power of the fuel and require additional stove cleaning.

### **⚠ Attention**

**People with damaged spine and pregnant women should avoid raising pellet bags.**

**The manufacturer denies any responsibility for any damages or poor operation of the stove due to the use of poor quality pellets.**

### **⚠ Attention**

**The pellet must conform to DIN 51731, DIN plus, Ö-Norm M-7135 or other comparable European standards.**


### **⚠ Attention**

**THE PELLET MUST NOT BE KEPT NEAR THE STOVE. Keep them at least half a metre away from the stove.**

When handling pellets, make sure that pellets do not spill.

If you pour the sawdust into the pellet tank, you may block the pellet loading system.

## **9. CONNECTING THE HYDRAULIC INSTALLATIONS**

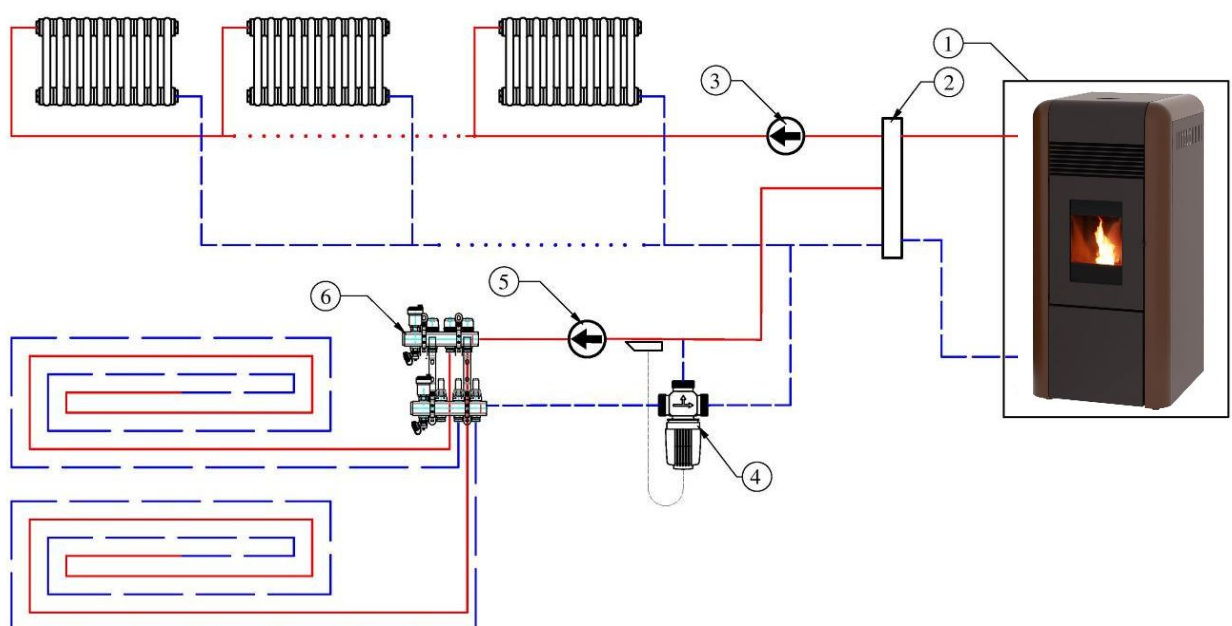

MARKS:

1. Pellet hydro stove DINO 27; 2. Hydraulic separator; 3. Circulator pump; 4. Three-way valve with pipe thermostat; 5. Circulator pump; 6. Divider for floor heating.

**IMPORTANT:**

Connecting the stove on a hydraulic installation can be done exclusively by qualified technicians, who can do this in accordance with applicable regulations of the country in which the installation is done.

ALFA PLAM disclaims all liability in case of a material or bodily harm, in the event of failure, poor functioning, if the above recommendations are not followed.

The stove is designed for central heating.

The stove is prepared for a closed heating system. Follow the SRPS guidelines.

The back of the boiler with the connectors is given in Figure 16.

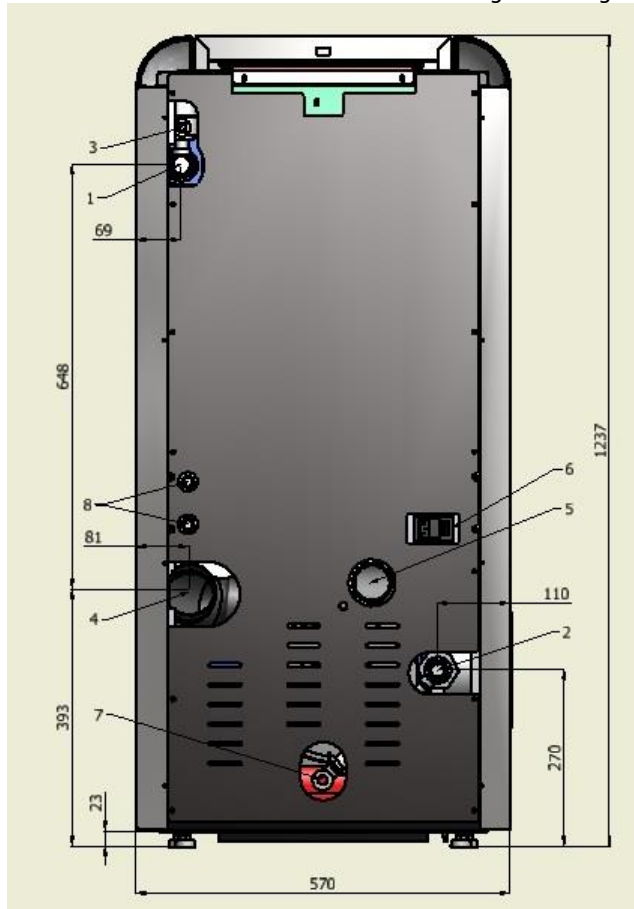


Figure 16

1. Water outlet 1
2. Pipe of return water
3. Pipe of safety valve
4. Fume connection 80
5. Primary air pipe
6. Main switch
7. Draining valve 1/2"
8. Security thermostats

## 10. PRESSURE AND RETURN PIPE

Outputs of the pressure and return pipes on the boiler are 1" and you cannot reduce them or taper to the first bifurcation. Use a 1" steel pipe or a copper pipe with the outside diameter of Ø28mm or greater.

When installing, strictly observe the slopes of pipes as they need to be at 0.5% (5mm. per meter of pipe) and the venting system (boiler, pipes, radiators).

Set up a thermo hydrometer at the pressure line to show the water pressure in the system and the water temperature at the back end of the boiler.

## 11. BUILT-IN COMPONENT OF THE STOVE

- In the stove, there are the following built-in components:

- Safety valve
- Circulation pump
- Automatic air valve
- Expansion container and
- Charging and discharging tap

For this reason there is no need to install these components again. The stove is complete, which is a great advantage most all of because there is no need for additional space for the listed components.

### 11.1. SAFETY VALVE

It is set up under the lid of the stove on the pressure line. Input connection is R1/2". It opens with water pressure of 2.5 bar. You can get to it by removing the right lateral side, when you are looking at the stove.

The output safety valves whose connection protrudes through the rear wall above the pressure line should be put into the sewer pipes.

### 11.2. CIRCULATION PUMP



A high-quality Wilo RS 25/6 – circulation pump has been built into the stove on the return line of R1". The power of the pump is 93W. It is turned on and off by the electronics by the set water temperature.

The pump shaft has to be in a horizontal position. For this reasons, when connecting with the installation make sure that the pump does not turn around! Firmly hold galvanized bolt at the end of the back side.

You can reach the pump by removing the left lateral side, when you are looking at the stove.

Note:

If the stove and the pump have been idle for a long time (a month, for example), the pipe shaft can stick to the base, it may not move the water, or it can burn out. If when starting the stove when the water in the boiler heats up the water pump does not start, if the radiators do not heat up when the set temperature is reached, if you do not hear the murmur of water (moving), or if the boiler temperature rises and radiators are not warming, remove the left lateral side as indicated in the previous paragraph, and get to the pump. Put a cloth under the pump and using a flat screw driver with the tip width of 5 - 7mm, unscrew the short screw from the front of the pump. There will be a little bit of water coming from the pump, which is normal. Push the screw driver into the opening of the pump, reach the groove of the pump shaft and rotating the screwdriver and the shaft to the right and left break in the pump shaft. Put the pump screw back in its place into the opening of the pump and tighten it. Make sure that the rubber from under the screw does not come out.

### 11.3. AUTOMATIC AIR VALVE

There is an automatic air valve on the pressure line under the lid. It is suppose to drain the air out from the boiler.

You can get to it by removing the right lateral side, when you are looking at the stove.

**The cap valve must be loose, not tight, so that the air can come out of the boiler and installations smoothly.**

### 11.4. EXPANSION VESSEL

There is an expansion vessel built into the stove with a volume of 10 litres. Its function is to stabilize the pressure in the boiler and in the heating installation. The factory set pressure in the vessel is 1 bar.

### 11.5. CHARGING AND DISCHARGING TAP

As its name says, this is a charging and discharging tap.

It is located in the back side, down.

The input connection is a R1/2", while the output has an extension for the hose.

## 12. INSTALLING AND IGNITING

Before the combustion starts entire system of central heating should be water-filled, well-vented, and the stove properly connected to the chimney, as discussed in previous counts.

Recommended operating pressure of water is 1 to 1.9 bar. Best to be within the limits of 1.2 to 1.6 bar.

The test pressure can be up to 1.9 bar.

**NOTE:**

**The stove must not be used without water. It must be tied to the installation to which the consumers are connected (radiators) with minimum power of 8 kW.**

## 13. PRACTICAL INSTRUCTIONS AND TIPS FOR THE USE OF THE HEATING SYSTEM

- All connections must be well sealed and fastened. There must be no leakage of water.
- Before you turn the stove on for the first time, the complete installation shall be tested with water at a maximum pressure of 1.9 bar.
- It is preferred that the water be at least once released out of the system due to the dirt which is located in the system.
- Make sure that all valves between the stove and the installation are open.
- Make sure that all the air from the boiler and installation is released before placing the boiler in operation. For this reason, the installation should be filled with water slowly so that the air manages to get out of the installation.
- During the ignition and cooling phase, the stove can expand and contract, and at the same time you can hear little crackling. This is absolutely normal, because the structure is made of steel and this certainly can not be regarded as a disadvantage.


Basic programming that is done in the factory guarantees proper operation and prevents overheating problems when you first turn on the stove, and for later as well.

## 14. PELLET LOADING

In order to load the hopper with pellet, we need first to open two lids. First, lift the upper lid and then, open the lower lid of the hopper by turning the handle counter clockwise. Load the wood pellets in the tank. Tank capacity is approximately three bags of 15 kg, a total of 45 kg of pellets. After loading, close the lid.

Note:

-It is necessary to close the lower lid properly. Press the lid, turn the handle clockwise and assure that lid is firmly closed. Make sure that the sealing tape of the lower lid is firmly in contact with the pellet hopper. The properly closed lid ensure the better combustion. The bottom lid is shown as on the following pictures:

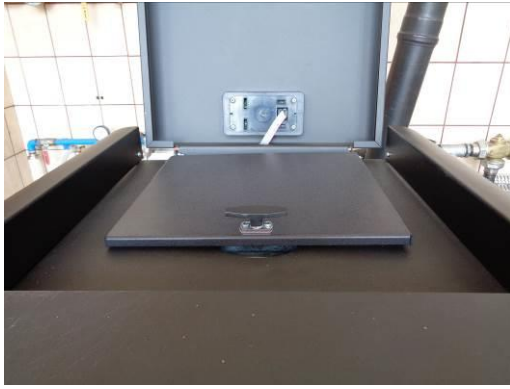

Do not remove the hopper safety grid! During loading the wood pellets, prevent the bag come in contact with hot surfaces.


## 15. CONTROL SYSTEM OF THE STOVE

A modern control system **is built into the stove**, which enables safe, efficient and reliable control over the operation of the stove and maximum functional utilization of the stove.


It is characterized by:

- simplicity of setting up and use,
- simple and direct user functions,
- reliable and flexible functional software specially developed for pellets burning appliances,
- advanced features available to installers, for adapting stove to different configurations and installations.

### 15.1. ELECTRIC CONNECTIONS SCHEME

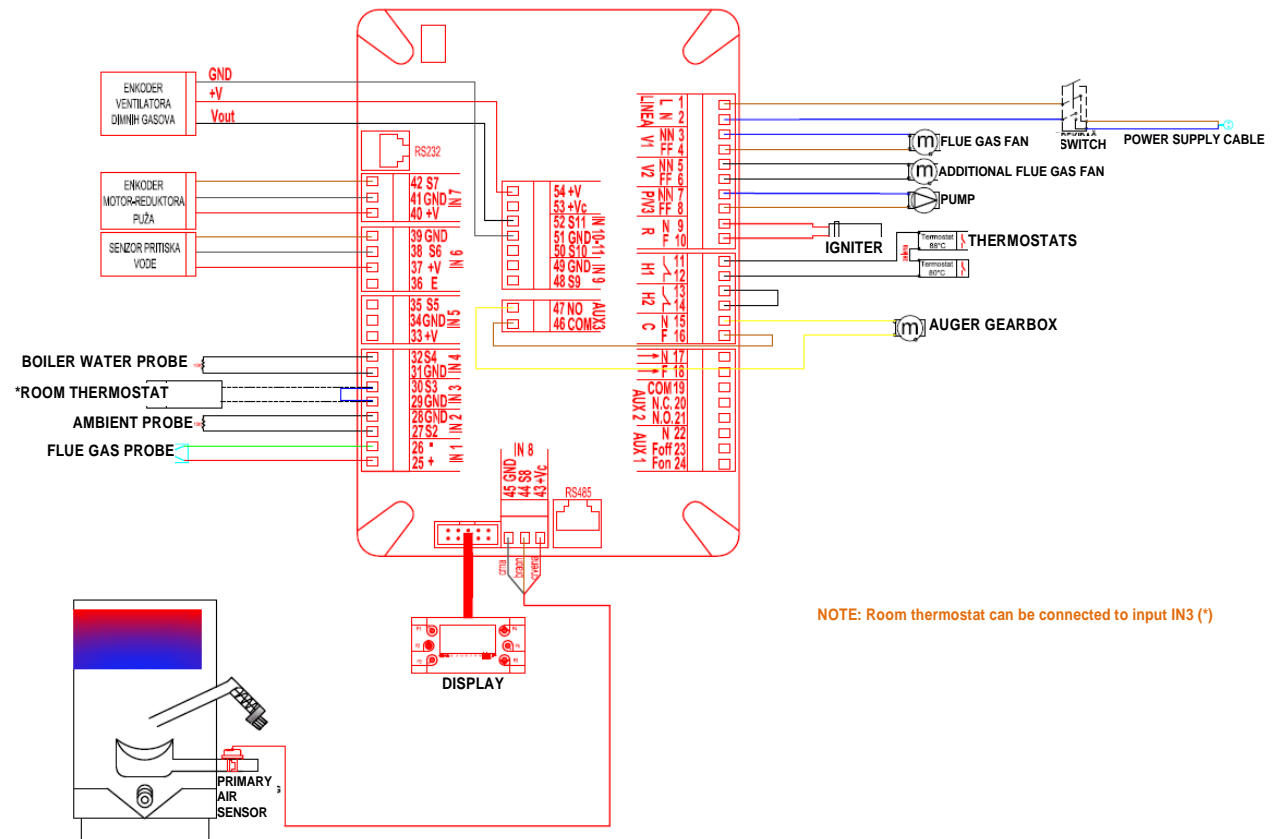




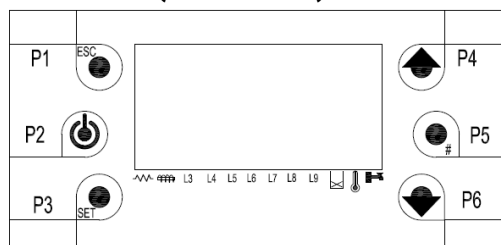

### 15.2. CONTROL PANEL (DISPLAY) - BUTTONS AND FUNCTIONS




- **Buttons:**

Button	Function	Description
P2	On/Off	Turning the stove on/off by pressing and holding the button for more than 3 seconds after the acoustic signal
	Unblocking	When the system is in the blocked state, by pressing and holding the button for more than 3 s after the acoustic signal, the system is unblocked
P4	Changing values	Changing values and settings in menus and submenus
P6	Navigating through menus and submenus	Navigating (changing) the menus and submenus
	Visualizations	Access to the visualization menu
P1	Esc	Leaving the current menu or submenu
P3	Menu	Entering the menu or submenu
	Modify	Allows a modification in the menu
	Set	Saves (records) data in the menu
P5	Reset system maintenance 2 Function	Resets the timer (only if this option is activated)
	Manual Stanby	By pressing the button for more than 3 seconds, the system goes into Standby mode

- **LED symbols:**

Igniter	LED is on: Igniter is on	
Auger	LED is on: Auger is active	
Pump	LED is on: Pump is active	L3
Aux 1 output	LED is on: Aux 1 output is activated	L4
Additional engine	LED is on: Additional engine is activated	L5
Aux 2 output	LED is on: Aux 2 output is activated	L6
Aux 3 output	LED is on: Aux 3 output is activated	L7
Not active		L8
Not active		L9
Pellets level sensor	LED is on: No pellets	
External thermostat	LED is on: Contact is open	
Sanitary water tap	LED is on: There is a need for sanitary water	

- **Display:**

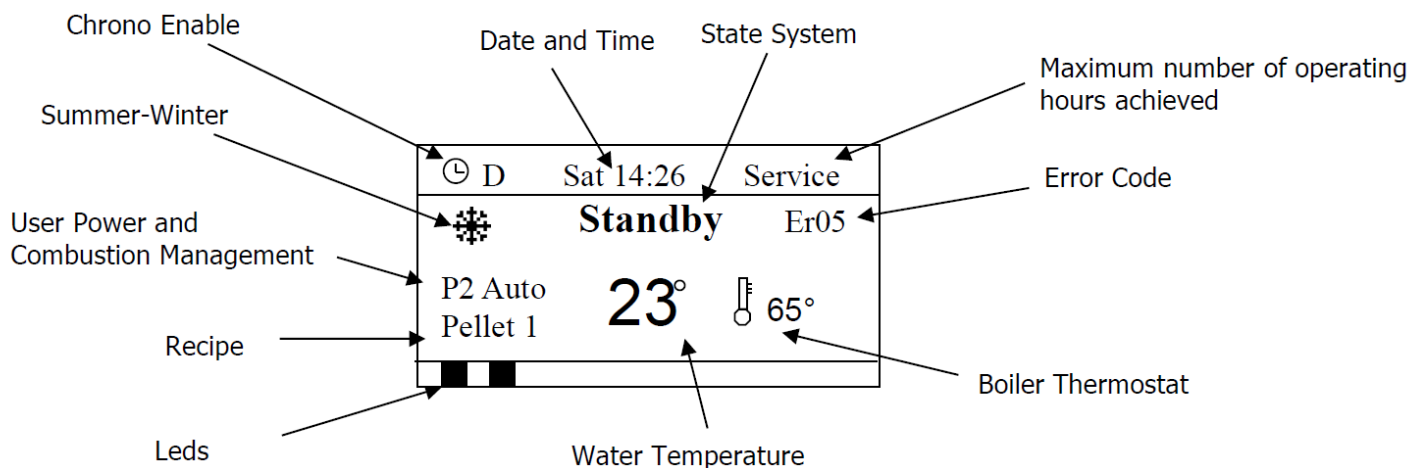

- **Displays:**

- Time and date
- Chrono mode D-Daily, W-Weekly, We-Week-End
- System power (P1, P2, P3, P4 i P5)
- Recipe (Pellet 1)
- System state (Check Up, Ignition, Stabilization, Run Mode, Modulation, Standby, Safety, Extinguishing, Recover Ignition, Block, Off)

- **Errors (Alarms):**

When an error (alarm) occurs, the system is shifted to the Block state.

Error (alarm) code	Error (alarm) description
Er01	Safety thermostat activated
Er02	Safety pressure switch activated
Er03	Turning off due to the too low temperature of flue gases

<b>Er04</b>	Turning off due to excessive water temperature in the boiler
<b>Er05</b>	Turning off due to excessive flue gas temperature
<b>Er06</b>	Safety thermostat activated on the auger housing
<b>Er07</b>	Encoder error. Missing signal
<b>Er08</b>	Encoder error. Inability to adjust number of revolutions
<b>Er09</b>	Water pressure too low
<b>Er10</b>	Water pressure too high
<b>Er11</b>	Error due to internal clock problem
<b>Er12</b>	Turning off due to unsuccessful ignition
<b>Er15</b>	Power failure longer than 50 minutes
<b>Er16</b>	Communication error RS485
<b>Er17</b>	Airflow regulator error
<b>Er18</b>	No pellets
<b>Er25</b>	Cleaning engine error
<b>Er39</b>	Airflow regulator broken
<b>Er41</b>	Minimum airflow in the CHECK UP stage has not been reached
<b>Er42</b>	Maximum airflow achieved
<b>Er47</b>	Auger encoder signal error
<b>Er48</b>	Error due to the inability to adjust the speed of the auger
<b>Er52</b>	Module I/O I2C Error

- **Other messages:**

<b>Sond</b>	This message displayed in the Check-Up stage indicates that the temperature at one or more probes is equal to the minimum value (0°C) or the maximum value (depends on the probe type). Ensure that the probe is not open (0°C) or in short circuit (the maximum value on the temperature scale).
<b>Service</b>	This message informs you that the planned number of work hours is reached and that it is necessary to call the service.
<b>Clean</b>	This message informs you that the planned number of work hours is reached and that general cleaning of the stove is necessary.
<b>Block Ignition</b>	This message appears when the system turns off while it is still in the ignition stage. The system will stop working only when it enters the Run Mode.
<b>Link Error</b>	This message informs you that there is no communication between the LCD display and the controller of the stove.
<b>Standby Man</b>	Appears if the system is in Standby mode due to the pressed button P5

- **Visualizations:**

By pressing the P4 and P6 buttons the visualization menu is entered. In this menu you can see the values of some system parameters.

L3 On P1 Pump	LED number and output status of the pump
L4 Off Safety Valve	LED number and output status Aux 1
L5 Off Out not used	LED number and output status of the additional engine
L6 On Load Engine	LED number and output status Aux 2
L7 Off Out not used	LED number and output status Aux 3
Exhaust T.: 103	Flue gases temperature (°C)
Water T.: 55	Water temperature (°C)
Buffer T.: 52	*Buffer temperature (°C)
Room T.: 21	Room temperature (°C)
Pressure: 1548	*Pressure of water in the boiler (mbar)
Air Flux: 680	Primary air flow rate (cm/s)
Speed Fan: 1000	Speed/voltage of flue gas engine (rpm/V)
Auger ON: 800	Speed/voltage of auger engine (rpm/V)
Product Code 448-0000	System code
FSYD01000135.0.2	Controller firmware version
PSYSF01000209.0.2	Display firmware version

\*In case the stove configuration has no installed probes these values are not visible.

### 15.3. MENU

The menu contains the User Menu and the Technical Menu.

The Technical Menu contains the settings and setup, through which the manufacturer can modify the parameters and configuration of the system. The Technical Menu is not available to the user but only to the authorized representative of the manufacturer.

User Menu (User menu)

By pressing the **P3** button the User Menu is entered.

## Combustion Management

Heating management

Chrono

Loading Manual

Date and Time

**P4** and **P6** buttons are used to select the desired menu or submenu. Then, by pressing the **P3** button the desired menu or submenu is entered.

Combustion Power	←	Parameter Name
Max: 5	←	Maximum Value
Set: 1	←	Current Value
Min: 1	←	Minimum Value

To increase or decrease the parameter value, press the **P4** or **P6** buttons. To save a new parameter value, press the **P3** button. To cancel all modifications and return to the old values, press the **P1** button.

After the parameter value has been changed, the new value is sent to the main controller.

If the transfer is not successful, the following message appears on the display:

Transfer  
not successful

In this case, it is necessary to modify it once more.

**The User Menu contains several menus and submenus.**


By pressing the **P3** key the User Menu is entered and the following list of submenus is displayed:

Menu	Description
Combustion Management	Menu for modification of combustion power, calibration of work gear engine and flue gas engine
Heating Management	Menu for modification the setpoints for temperature of water in the boiler, buffer and other heating parameters.
Chrono	Menu for selecting chrono program mode and boiler on/off times
Manual Load	Menu for manual loading of the auger. It is only feasible when the system is in the OFF state
Time and Date	Menu for setting time and date
Remote Control	Radio-command activation menu
Language	Menu for changing the language on the control panel
Keyboard Menu	Menu for adjusting the contrast and brightness of the LCD panel
System Menu	Menu for accessing technical settings

### 15.3.1. COMBUSTION MANAGEMENT MENU

This is a menu for the modification of parameters that determine the combustion of the stove. It contains several submenus.

The menu is entered by pressing the **P3** button, and the following submenus are listed:

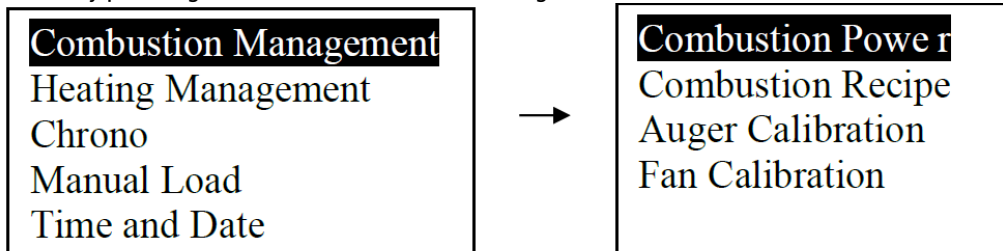


#### 15.3.1.1. COMBUSTION POWER

Menu for setting the system's combustion power in manual or automatic mode (if available). In manual mode, the user can adjust the desired combustion power by himself.

Combustion	Description
1-5 (Combustion power 1, 2, 3, 4 i 5)	Power is set manually by selecting Power 1, 2, 3, 4 or 5.
Auto	Power is set automatically by the system

The Combustion Power menu is entered by pressing the **P3** button.

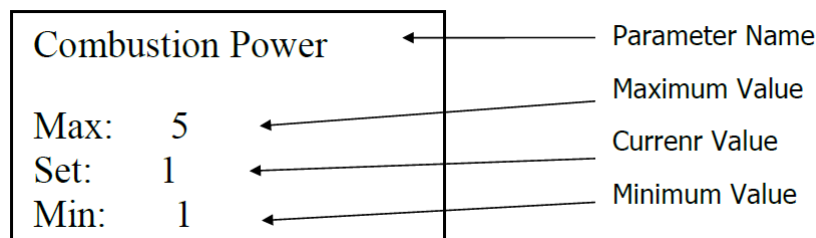

The desired combustion power is selected via the **P4** and **P6** buttons. Press the **P3** button to save the newly set value of the parameter. To cancel all modifications and return to the old values, press the **P1** button.

#### 15.3.1.2. COMBUSTION RECIPE

Menu for selecting the combustion recipe. If only one recipe is set at the factory, this menu is not visible.

#### 15.3.1.4. AUGER CALIBRATION

Menu for changing the feeding rate of the auger. The system has 10 calibration steps (from -5 to +5, the factory default is 0). The calibration effect is valid in the operating mode and in the modulation. For each step, the value is increased or decreased by 5%.

*Example:* Calibration value = -2;  $(-2 \times 5\% = -10\%)$  - means that the calibrated values of the auger speed will be reduced by 10% compared to the factory values.

Factory settings	C03=600	C04=900	C05=1200	C06=1600	C07=2000	C11=600
Calibrated values	C03=540	C04=810	C05=1080	C06=1440	C07=1800	C11=540

#### 15.3.1.5. Combustion Fan Calibration

Menu for changing the number of revolutions of the flue gas fan. The system has 10 calibration steps (from -5 to +5; the factory default is 0). The calibration effect is valid in the operating mode and in the modulation. For each step, the value is increased or decreased by 5%.


*Example:* Calibration value = +3;  $(+3 \times 5\% = +15\%)$  - means that the calibrated values of the fan speed of the flue gas fans will be increased by 15% compared to the factory values.

Factory settings	U03=1000	U04=1200	U05=1400	U06=1600	U07=1800	U11=900
Calibrated values	U03=1150	U04=1380	U05=1610	U06=1840	U07=2070	U11=1030

**Note:** The calibration of the auger and flue gas fan must not be performed without prior consultation of an authorized service or representative of the manufacturer.

#### 15.3.2. HEATING MANAGEMENT MENU

This is a menu for modifying parameters that determine the heating performance of the boiler. It contains several submenus. The menu is accessed by pressing the **P3** button and the following submenus appear:

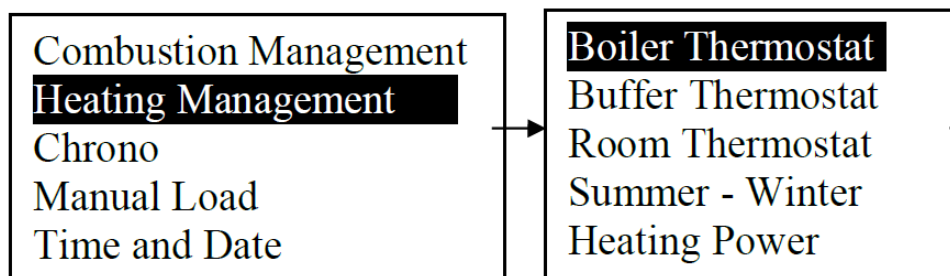

#### 15.3.2.1. Boiler Thermostat

A menu that allows you to adjust the set water temperature in the boiler. The temperature range of the water in the boiler can be adjusted from 30°C to 80°C. By adjusting the set water temperature, the boiler will operate at the set power until it reaches the set water temperature in the boiler. When the set water temperature is reached in the boiler, the boiler goes into the state of modulation and continues to operate at minimum power.

#### 15.3.2.2. Buffer Thermostat

Menu that allows the buffer temperature to be modified. This menu is only active if the buffer is installed.

#### 15.3.2.3. Room Thermostat

In this menu, the set ambient probe temperature is modified. By pressing **P4** and **P6** buttons within Heating Management menu we select Room Thermostat. The Room Thermostat menu is entered by pressing the **P3** button.


Combustion Management Heating Management Chrono Manual Load Time and Date	Boiler Thermostat Buffer Thermostat <b>Room Thermostat</b> Summer-Winter Heating Power
---	--

Again, by pressing **P4** and **P6** we select Set value and enter it by pressing P3. The ambient temperature setting range is from 10°C to 40°C. Press the **P3** button to save the newly set value of the parameter. To cancel all modifications and return to the old values, press the **P1** button.

Room Thermostat	←	Parameter Name
Max: 40	←	Maximum Value
Set: 25	←	Current Value
Min: 10	←	Minimum Value

#### 15.3.2.4. Summer – Winter

In this menu, the functionalities of the stove are changed depending on the season. The display shows one of two symbols:



#### 15.3.2.5. Heating Power

This menu is not active.

#### 15.3.2.6. Remote Keyboard

This menu allows control via radio room thermostat. It must be activated by pre-setting a specific parameter.

### 15.3.3. CHRONO MENU

In this menu the system on/off times are set, i.e. the programmed operation of the stove is set for precisely determined periods of time.

It contains two submenus:

- Modality
- Programming

#### 15.3.3.1. Modality

By entering the Chrono menu, two submenus appear, namely Modalities and Programming.

Via **P4** and **P6** buttons one of the submenus can be selected, and then accessed by pressing the **P3** button. Entering the Modality menu displays the following:

Disable
Daily
Weekly
<b>Week-End</b>

Description of the settings in the Modality menu:

Description	Buttons	Display on the screen
Selected modality flashes		
Entering the mode of changes	P3	
Selection of required modality	P4 and P6	
Canceling changes and return to the old modality	P1	
Saving changes	P3	
Exit menu	P1	

Disable
Daily
Weekly
<b>Week-End</b>

#### 15.3.3.2. Programming

After accessing the Chrono Menu, there are two submenus, Modality and Programming.

Via **P4** and **P6** buttons one of the submenus can be selected and then accessed by pressing the **P3** button. After entering the Programming menu the following screen appears:

Daily  
Weekly  
Week-End

Description of settings in the Programming menu:

Selection of program	Buttons	Display on the screen
Selected program flashes		Daily
Entering submenu	P3	Weekly
Choosing the desired program	P4 i P6	Week-End
Exit menu	P1	

There are three separate types of programming. For example, if Daily program is activated, other programs remain unchanged. **After completion of the programming, it is necessary to select the desired modality in the Modality menu to enable the system to be turned on/off during the specified time periods.**

Description of the settings of the desired program in the Chrono menu:

CHRONO PROGRAM	Buttons
After selecting the desired program, select the time period for turning on/off	P4 or P6
Entering the change mode (selected time flashes)	P3
Change of time	P4 or P6
Saving the change in the program	P3
Turning on the program (✓ appears) or turning of the program (✓ disappears)	P5
Exit	P1

There are three types of programs that can be chosen:

- Daily program - the week day is selected and the system on and off times are programmed. There are three time ranges for each day.

Daily Weekly Week-End	Monday Tuesday Wednesday Thursday Friday	Monday ON OFF 09:30 11:15 ✓ 00:00 00:00 00:00 00:00
-----------------------------	--	---

- Weekly program - system on/off times are programmed for the whole week. There are three time ranges for setting up.

Daily Weekly Week-End	→	Mon-Sun ON OFF 08:30 13:15 ✓ 20:00 22:00 00:00 00:00
-----------------------------	---	--

- Weekend program - is selected between two periods "Monday-Friday" and "Saturday-Sunday". For both periods there are three time ranges for setting.

Daily Weekly Week-End	→	Mon-Fri Sat-Sun	→	Mon-Fri ON OFF 10:00 12:15 14:00 16:00 ✓ 00:00 00:00
-----------------------------	---	--------------------	---	--

This menu allows manual turning on/off of pellets dosing. This operation can be done only when the boiler is in OFF state.

#### 15.3.4. MANUAL LOADING MENU

This menu allows manual pellets loading when the stove is commissioned for the first time.

**To perform this operation, the system needs to be in OFF state.**

#### 15.3.5. TIME AND DATE MENU

This menu allows you to set the exact time and date.

By pressing the P4 and P6 buttons, the hours, minutes, years, months and days are set.

The change mode is entered by pressing the P3 button, while P4 and P6 buttons are used for changing the value. Changes are saved by pressing the P3 button and then one can leave the menu by pressing the P1 button.



### 15.3.6. REMOTE CONTROL MENU

This menu allows you to activate or deactivate the remote control - Remote Control SYTX. Remote control is not provided as factory setting.


### 15.3.7. LANGUAGE SELECTION MENU

This menu allows you to change the language on the LCD display.

### 15.3.8. DISPLAY MENU

Menu	Description
Set contrast	Menu for setting contrast on the LCD display
Set Minimum Light	Menu for setting brightness on the LCD displeja

#### 15.3.8.1. Setting Contrast

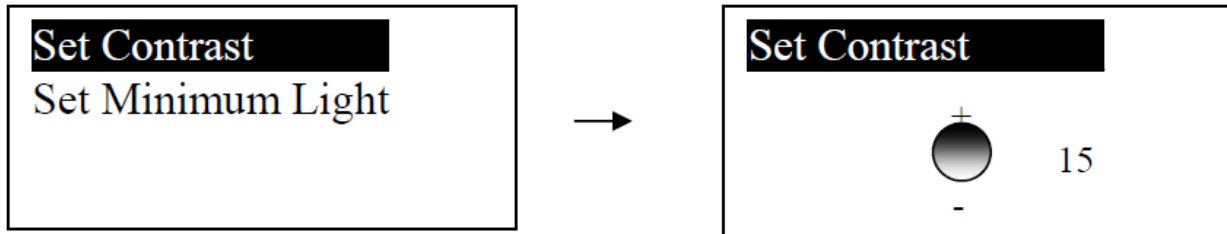


Via **P4** and **P6** buttons contrast is increased or decreased.

By pressing the **P3** button, the changes are saved and one can exit the menu.

Via **P1** button one can exit the menu without saving the changes.

#### 15.3.8.2. Set Minimum Light

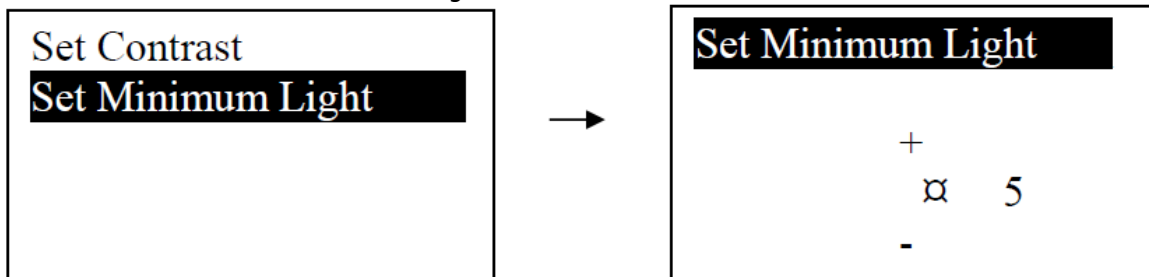

Via **P4** and **P6** buttons brightness is increased or decreased (min 0, max 20).

By pressing the **P3** button, the changes are saved and one can exit the menu.

Via **P1** button one can exit the menu without saving the changes.

### 15.3.9. SYSTEM MENU

This menu allows access to technical settings. Access is password protected and allowed only to authorized technical staff.

## 15.4. STOVE IGNITION AND FUNCTIONAL CONDITIONS

The stove is switched on by pressing the **P2** button for more than 3 seconds. After that you can find the following functional conditions of the stove:

<b>Check Up</b>
In the check up stage, the initial check of the input signals of the stove and the correctness of the probes is performed. At this stage, the flue gas fan runs at the maximum speed and the auger and igniter are switched off. The check up stage takes a few seconds and after a successful check, the ignition stage starts.
<b>Ignition</b>
The ignition stage consists of the following four sub-stages: <ul style="list-style-type: none"><li>- Preheating stage</li><li>- Pellet preloading stage</li><li>- Fixed ignition stage</li><li>- Variable ignition stage</li></ul> For the entire duration of the ignition stage, the IGNITION message is shown on the display. There are no special tags for sub-stages.
<b>Ignition Preheating</b>
At this stage, the igniter is started before the pellets inserting starts. In order to make burn the pellets as efficient as possible, it is desirable that the igniter is already heated at the moment when the pellets inserting starts. At this stage, the igniter is active and the auger is inactive. The flue gas fan runs at a lower speed to accelerate the ignition of the igniter.
<b>Ignition Preload</b>
At this stage, the initial insertion of pellets occurs, i.e. the auger inserts a certain quantity of pellets that is necessary for ignition. At this stage, the igniter, auger and flue gas fan are active.

<b>Ignition – Fixed Stage</b>
This stage is a fixed time period of 180 seconds and in case the conditions for stove ignition are reached before the end of this stage, it will always last until the stove is switched to the stabilization stage only after the expiration of a fixed period of time. At this stage, the igniter, auger and flue gas fan are active.
<b>Ignition – Variable Stage</b>
This stage occurs after a fixed ignition stage. The duration of this stage is a variable time period that lasts up to the moment when the ignition conditions are met, or until the flue gas temperature has reached at 45°C. When the conditions for igniting the boiler is met before the end of this stage, it is interrupted and the next stage - the stabilization stage starts. At this stage, the igniter, auger and flue gas fan are active.
<b>Stabilization</b>
The stabilization stage is a transient state between the ignition stage and the stage of operation. This stage occurs when the ignition condition is met, i.e. when the flue gas temperature reaches 45°C. It lasts for three minutes and during this time the auger, flue gas fan and igniter are active.
<b>Run Mode</b>
After the stabilization stage, the stove operation stage starts. At this stage, there are five power levels that can be adjusted. At this stage, the igniter is switched off while the auger, flue gas fan and pump are active and operate at different intensities depending on the power level of the stove. The stove works at a given power until the modulation conditions are met.
<b>Modulation</b>
<p>The stove goes into the state of modulation when one of the three conditions is fulfilled:</p> <ol style="list-style-type: none"> <li>1. When the stove reaches the set water temperature</li> <li>2. When the stove reaches the set ambient temperature</li> <li>3. When the flue gas temperature reaches a value greater than 200°C</li> </ol> <p>In the state of modulation, the stove works at minimum power - power 1, until the temperature decreases below the limit value.</p>
<b>Standby</b>
<p>The stove goes into Standby when one of the two conditions is met:</p> <ol style="list-style-type: none"> <li>1. When the boiler reaches the set water temperature, it goes into modulation and continues to increase the water temperature by inertia up to the value 4°C higher than the set water temperature in the boiler.</li> <li>2. When an external (room) thermostat is responding</li> </ol> <p>In Standby mode, the pellets insertion stops and the stove is switched off. The stove is switched on again when the water temperature in the boiler is reduced by 4°C below the set value or when the room thermostat is deactivated.</p>
<b>Safety</b>
Safety state occurs when the flue gas temperature exceeds 230°C and when the water temperature in the boiler reaches 85°C. At this stage, pellets insertion stops until the flue gas temperature is below 230°C or the water temperature in the boiler is below 85°C. If the temperature is not reduced in the next 60 seconds, the boiler goes into the Alarm state and sends the <b>Er04</b> or <b>Er05</b> message.
<b>Extinguishing</b>
<b>The stove is switched off by pressing the P2 button for more than 3 seconds.</b> Then an extinguishing stage occurs in which the insertion of pellets is stopped and the flue gas fan and pump work at the maximum capacity in order to cool the boiler down as soon as possible. The minimum duration of the extinguishing stage is 300 seconds, and the condition for switching off the stove completely is when the flue gas temperature is less than 70°C.
<b>OFF</b>
In this state, the stove is switched off, i.e. no outlet on the stove (flue gas fan, pump, igniter and auger) is not active.
<b>Block</b>
The Block state occurs in the event of an error or an alarm. In the Block state, the exhaust fan, the auger and the igniter are off. Hold down the <b>P2</b> button for 3 seconds to exit: if there are no more block conditions or there is no cause of alarm, the system will turn off.
<b>Recover Ignition</b>
<p>The stove goes into this stage in two cases:</p> <ol style="list-style-type: none"> <li>1. If the power supply is interrupted during the operation and the flue gas temperature is greater than 45°C.</li> <li>2. Pressing the main switch at the moment the stove is in the extinguishing stage.</li> </ol>

## 15.5. POSSIBLE PROBLEMS AND SOLUTIONS

Message on display	Description	Possible causes	Resetting the error	Possible solutions to the cause of the alarm
			Wait until the stove completely cools	Check the correctness and functionality of the pump

Er01	Safety thermostat activated	High water temperature in the boiler	down and then unscrew the plastic cap on the thermostat on the back of the stove and press the reset button	
		Faulty or poorly connected pump		
		Faulty thermostat		Contact a service
Er02	Safety pressure switch activated	Flue gas extraction obstruction	Press and hold the P2 button for more than 3 seconds	Check the level of dirt in the flue pipes and chimney
		Incorrect installation of chimney		Contact a service
		Faulty pressure switch		
Er03	Turning off due to the too low temperature of flue gases	Poor combustion (too little or too much pellets in the firebox)	Wait until the stove turns off and then press the P2 button for more than 3 seconds	Check the size of the pellets
		Pellets storage is empty		Check the amount of dirt in the chamber
		Faulty flue gas probe		Check the condition of the flue pipes
				Contact a service
Er05	Turning off due to excessive water temperature in the boiler	Flue gas temperature exceeds the limit	Wait until the stove turns off and then press the P2 button for more than 3 seconds	Insufficient heat transfer - contact the service
		Flue gases extraction obstruction		Check the filthiness of the flue pipe outlet and the chimney
		Faulty flue gas probe		
Er07	Encoder error	Missing encoder signal	Wait until the stove turns off and then press the P2 button for more than 3 seconds	Contact a service
Er08	Encoder error	Flue gas fan does not react	Wait until the stove turns off and then press the P2 button for more than 3 seconds	Contact a service
		Flue gas fan works at speed different than set		
Er11	Clock error	Problems with internal clock	Press and hold the P2 button for more than 3 seconds	Check the accuracy of the set time
		Insufficient internal battery capacity		Verify the correct programming in Chrono mode
				Contact a service
Er12	Failed ignition of the stove	Stove ignition error	Wait until the stove turns off and then press the P2 button for more than 3 seconds	Check the condition and quality of the used pellets
		During the ignition stage, the corresponding flue gas temperature is not achieved		Check the filthiness and draft in the flue pipe outlet
		Faulty flue gas probe		Contact a service
Er15	Power supply failure	Power outage during boiler operation	Press and hold the P2 button for more than 3 seconds	Check system and installation correctness
				Contact a service
Er16	Communication error between electronics and display	Display cable interrupted	Press and hold the P2 button for more than 3 seconds	Check the cable and the display cable connectors
		Display cable connector damaged		Contact a service
Er17	Primary air flow meter error	The primary air flow meter does not adjust the boiler operation	The stove continues to operate without adjusting the primary air. To reactivate the flow meter, turn off the stove. Wait until the stove turns off and then press the P2 button for more than 3 seconds	Check the filthiness of the pipe for primary air supply
				Check the filthiness and the draft in the flue pipe outlet and chimney
				Contact a service
Er39	Primary air flow meter sensor is damaged	Faulty sensor	The stove continues to operate without adjusting the primary air	Contact a service

Er41	Minimum airflow in the CHECK UP stage has not been reached	Presence of some obstacle or large impurities in the primary air inlet pipe	Wait until the stove turns off and then press the P2 button for more than 3 seconds	Check and clean the primary air inlet pipe
		Flue pipe outlet obstruction		Check filthiness and draft in flue pipes and chimney
		Poorly closed doors in the ignition stage		Check that the door of the chamber closes well
				Contact a service
Er42	Primary air flow is higher than maximum allowed value	Too much supplied air	Wait until the stove turns off and then press the P2 button for more than 3 seconds	Check the primary air inlet pipe
				Check filthiness and draft in flue pipes and chimney
				Contact a service

## 16. SAFETY MEASUREMENTS

### The stove is equipped with the following safety devices:

#### - PRESSURE REGULATOR

Checks the pressure in the chimney. It stops the spiral conveyor of the pellets when the drain is clogged or when there is pressure (wind).

#### - FLUE GASES TEMPERATURE SENSOR

Checks the temperature of flue gases that allow the stove to be turned ON or stop the ignition if the flue gas temperature drops down below the programmed value.

#### - CONTACT THERMOSTAT ON THE SNAIL BASE

When the temperature goes over the set safety value the stove will turn off immediately.

#### - BOILER CONTACT THERMOSTAT

When the temperature goes over the set safety value the stove will turn off immediately.

#### - WATER TEMPERATURE SENSOR

When the water temperature comes close to the stop-temperature (80 ° C) the sensor triggers the stove to do a series of cooling cycles or turns the stove off automatically using the ECO-STOP in order to prevent blocking of the above-described capillary temperature sensor.

#### - ELECTRIC SAFETY

The stove is protected from high current disturbances using standard fuses that are located in the main switch on the back side of the stove and on the control panel - the motherboard.

#### - FLUE GASES FAN

If the fan stops, the motherboard immediately blocks the supply of pellets and an alarm signal will show.

#### - GEAR MOTOR

When the gear motor stops working, the stove keeps on working until the flame, due to the lack of oxygen, goes out and until the stove reaches the minimal cooling level.

#### - INTERRUPTION OF ELECTRICITY

If there is a short interruption of electricity the stove automatically starts to cool down.

#### - NO IGNITION

If there is no flame when you turn the stove on the stove goes into an alarming state.

## 17. FAULTS - CAUSES – SOLUTIONS

PROBLEMS	POSSIBLE CAUSES	SOLUTIONS
<b>Wooden granules are not put into the firebox, in the combustion chamber.</b>	<ol style="list-style-type: none"> <li>1. The wooden granules tank is empty.</li> <li>2. The infinity spiral is blocked.</li> <li>3. The gear motor of the infinity spiral is defective.</li> <li>4. Electronic card is defective.</li> </ol>	<ol style="list-style-type: none"> <li>1. Fill the tank</li> <li>2. Empty the tank and unblock the spiral - snail</li> <li>3. <i>Change the gear motor</i></li> <li>4. <i>Change the electronic card</i></li> </ol>
<b>The flame is out or the stove turns off automatically.</b>	<ol style="list-style-type: none"> <li>1. The wooden granules tank is empty.</li> <li>2. The combustion chamber is not supplied with the wooden granules.</li> <li>3. Safety probe intervention for the wooden granules temperature.</li> <li>4. The doors are not closed properly or the glass sealing is worn out.</li> <li>5. Inadequate wooden granules.</li> <li>6. Poor supply of wooden granules.</li> <li>7. The combustion chamber is empty.</li> <li>8. The chimney is clogged.</li> <li>9. Interference of failure of the pressure switch.</li> <li>10. The smoke vacuum motor is defective.</li> </ol>	<ol style="list-style-type: none"> <li>1. Fill the tank with wooden granules.</li> <li>2. See last instruction.</li> <li>3. Let the stove cool off completely and turn in back on again. If the problem persists call technical support.</li> <li>4. Close the door or change the glass sealing with original sealing.</li> <li>5. Change the type of the wooden granules and pick the type that is approved by the manufacturer.</li> <li>6. Check the dosage and settings.</li> <li>7. Clean the combustion chamber as instructed in the manual.</li> <li>8. Clean the smoke channel.</li> <li>9. Change the pressure switch.</li> <li>10. <i>Check the motor and change if needed.</i></li> </ol>

<b>It worked for a couple of minutes but then it turned off.</b>	<ol style="list-style-type: none"> <li>1. The ignition phase is not over.</li> <li>2. Check if there is an electricity interruption.</li> <li>3. The smoke channel is clogged.</li> <li>4. Interference of failure of the pressure switch.</li> <li>5. The spark plug is damaged.</li> </ol>	<ol style="list-style-type: none"> <li>1. Try igniting again.</li> <li>2. See last instruction.</li> <li>3. The smoke channel is clogged.</li> <li>4. <i>Check or change the probe.</i></li> <li>5. <i>Check or change the spark plug.</i></li> </ol>
<b>Wooden granules are settling in the combustion chamber. The glass on the door is dirty and the flame is weak.</b>	<ol style="list-style-type: none"> <li>1. Lack of air for combustion.</li> <li>2. Wet or inadequate wooden granules.</li> <li>3. The smoke vacuum system motor is defective.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean the combustion chamber and check if all the openings are clear. Do the standard cleaning of the combustion chamber and the smoke channel. Check if air flow is clogged. Check the gaskets on the door.</li> <li>2. Change the type of the wooden granules.</li> <li>3. Check the motor and change if needed.</li> </ol>
<b>The smoke vacuum motor is defective.</b>	<ol style="list-style-type: none"> <li>1. The stove is not receiving the electricity.</li> <li>2. The motor is defective.</li> <li>3. Motherboard is defective.</li> <li>4. The control panel is defective.</li> </ol>	<ol style="list-style-type: none"> <li>1. Check the main power supply and resistance to melting.</li> <li>2. Check the motor and condenser; change if needed.</li> <li>3. <i>Change the electronic card.</i></li> <li>4. <i>Change the control panel.</i></li> </ol>
<b>In automatic mode the stove works at maximum capacity all the time.</b>	<ol style="list-style-type: none"> <li>1. The thermostat is programmed to the maximum position.</li> <li>2. The thermostat for outside air always checks the cool air.</li> <li>3. The probe that checks the temperature is defective.</li> <li>4. The control panel is defective or not working.</li> </ol>	<ol style="list-style-type: none"> <li>1. Set the thermostat temperature again.</li> <li>2. Change the probe position.</li> <li>3. <i>Check the probe and change if needed.</i></li> <li>4. <i>Check the control panel and change if needed.</i></li> </ol>
<b>The stove does not turn on</b>	<ol style="list-style-type: none"> <li>1. Check if there is an electricity interruption.</li> <li>2. The wooden granules probe is blocked.</li> <li>3. The pressure switch is not working (says it is blocked).</li> <li>4. The smoke vacuum or smoke supply channel is clogged.</li> </ol>	<ol style="list-style-type: none"> <li>1. Make sure the plug is in and check if the main switch is in I position.</li> <li>2. Unblock the probe by checking the thermostat in the back. If it blocks again <i>change the thermostat.</i></li> <li>3. Change the pressure switch.</li> <li>4. Clean the smoke channel.</li> </ol>

Table 8.

## 18. INFORMATION ON DISPOSAL (THROWING AWAY) AND DISMANTLING (PULLING APART) THE STOVE

Dismantling and throwing away, or disposing of an old used stove is the sole responsibility of the owner.

The owner of the stove must abide by the regulations in his/her country related to the safety and environment protection. Dismantling and disposing of the stove may be left to a third party to do if the third party is a company authorized to collect and dispose of such materials.

**NOTICE:** *In all cases you must abide by the applicable regulations of the country where the stove is installed regarding disposal of such materials (things) and, if necessary, report the disposal of such items.*

### **ATTENTION**

*Dismantling the stove must be done only when the chamber of the stove is not working and when the stove is unplugged from power (no power supply).*

- pull out all electric parts,
- throw away the batteries and electronic cards in the proper garbage cans in accordance with the standards.
- separate the batteries you are keeping from the electric cards,
- dismantle the stove with the help from an authorized company

### **ATTENTION**

*Disposing of the stove in public places poses a serious risk for people and animals. In such cases it is always the responsibility of the owner if a person or an animal gets hurt.*

*When the stove is dismantled, this manual and all other documents related to the stove must be destroyed.*